



Puppy Glove™

Poly Pet Station - Steel Post

INSTALLATION INSTRUCTIONS


415242

Box 1 Includes:



■ **Aluminum Pet Sign**

BAG B

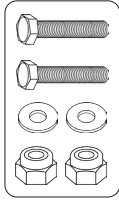


- **BAG B:**
- 2 - 2-1/4" Bolts
- 2 - Washers
- 2 - Locknuts



- **Poly Trash Receptacle (10 Gallon)**
- **Attached Lid**

BAG D



- **BAG D:**
- 2 - 2-1/2" Bolts
- 4 - Washers
- 2 - Locknuts




- **2 Keys for Dispenser (inside the dispenser)**




■ **Poly Bag Dispenser**


BAG C



- **BAG C:**
- 2 - 2-1/2" Bolts
- 4 - Washers
- 2 - Locknuts

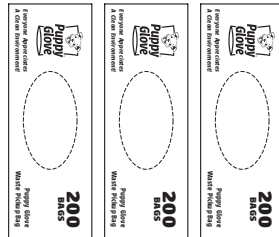

- **3 Boxes of Waste Pick Up Bags***



- **1 Box of Trash Receptacle Liner Bags***


*Trash receptacle liner bags and waste pick-up bags may be sent in a separate shipping box.

Box 2 Includes:


(Separate Shipping Box)

- **8' Galvanized Steel Telescopic Mounting Post**
- Small - 1-3/4" x 1-3/4" x 4'
- Large - 2" x 2" x 4'

BAG A



- **BAG A Contents:**
- 2 - Carriage Bolts (2-1/2" x 5/16")
- 2 - Washers
- 2 - Locknuts



PLEASE CHECK THE CONTENTS OF THE BOXES AND CALL CHADWELL SUPPLY IF ANY PARTS ARE MISSING.

ChadwellSupply.com | 888.341.2423



Puppy Glove™

Poly Pet Station - Steel Post

INSTALLATION INSTRUCTIONS

415242

CHOOSE A SPOT!

Pick a visible location in your community for the Puppy Glove™ Pet Station.

INSTALL THE MOUNTING POST





- Separate the smaller post 1 $\frac{3}{4}$ " x 1 $\frac{3}{4}$ " x 4' from the larger post 2" x 2" x 4' (fig. 1).
- Dig an 18 inch deep by 8 inch wide hole (fig. 2).
- Insert the larger post (2" x 2" x 4') about 12 $\frac{3}{4}$ " into the hole.
- Make sure the post is level and plum (vertical position).
- Stabilize it by placing a rod (not included) through the holes right above ground level.
- Mix concrete (not included), following manufacturer instructions, then fill the hole with concrete.
- Let the concrete dry for at least 12 hours.

ATTACH THE TOP POST

- Slide the smaller post into the larger cemented post until the first 4 holes align (fig. 3).
- Secure the posts together with enclosed carriage bolts, washers, and locknuts (Bag A) (fig. 4).
- Use one bolt in the top overlapping hole (pointing front to back).
- Use one bolt in the bottom overlapping hole (pointing left to right).
- Once assembled, the total height of the telescopic post should be about 6'6" (fig. 6).

ATTACH THE SIGN

- Mount the Puppy Glove™ Pet Sign to the top of the 1 $\frac{3}{4}$ " post, with the top hole of the sign matching the top hole in the post.
- Secure with the enclosed 2 $\frac{1}{2}$ bolts, washers and locknuts (Bag B) (fig. 5).

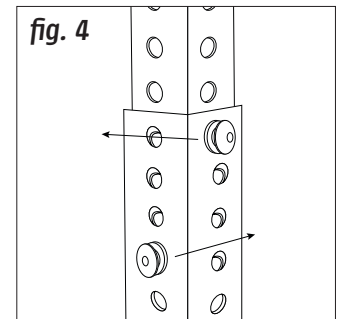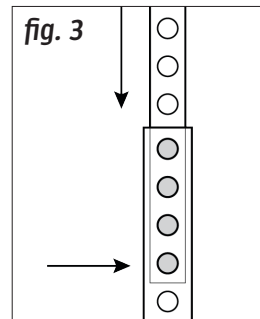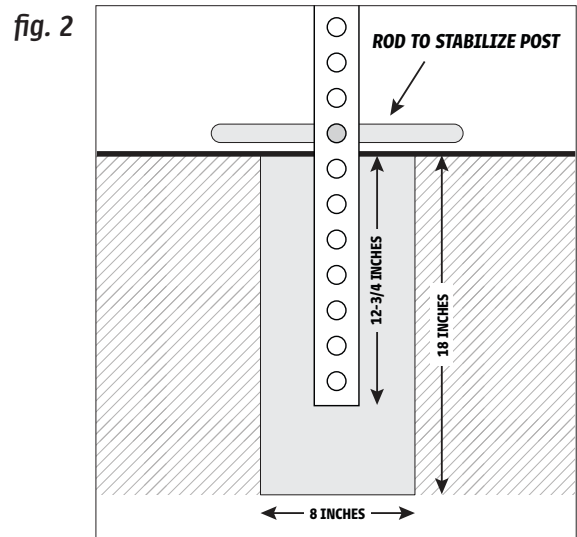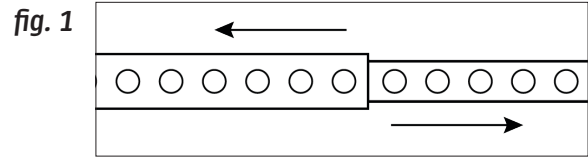



Puppy Glove™

Poly Pet Station - Steel Post

INSTALLATION INSTRUCTIONS

415242

ATTACH THE BAG DISPENSER

- Remove the two keys located inside the dispenser.
- Insert key into the universal cam lock on the front access panel. Turn the key a quarter turn to the right or left.
- Gently pull the bottom of the front access panel about 2 inches towards you and lift to release and separate the front access panel from the body of the dispenser.
- Install the Puppy Glove™ Poly Bag Dispenser just below the sign, about 1" under the bottom edge of the sign.
- Locate the two pre-drilled holes on the back wall of the dispenser.
- Align the two pre-drilled holes in the dispenser with the holes on the telescopic post and secure with the enclosed bolts, washers and locknuts (Bag C) (fig. 6).

NOTE: The 2½" bolt is to be installed with an exterior washer in the top mounting hole of the Dispenser.

DO NOT OVER-TIGHTEN TO AVOID POSSIBLE CRACKING OF DISPENSER UNIT

FILL/REFILL THE BAG DISPENSER

- To fill/refill the dispenser with Puppy Glove™ Waste Pick Up Bags, take the 3 boxed rolls, and tear off the perforated seal from each box.
- Place the 3 boxes next to each other vertically on the shelf inside the body of the dispenser with the opening of the boxes facing the front.
- Reinstall the front locking access panel and lock with the key.
- Reach through each of the 3 openings and find the edge of the first bag and pull until the Puppy Glove™ logo is visible.


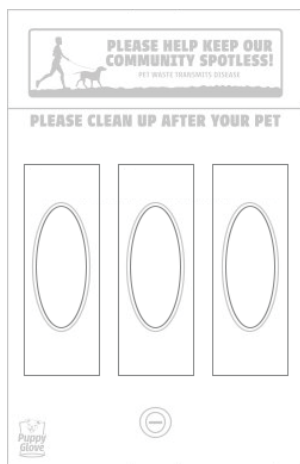


fig. 6



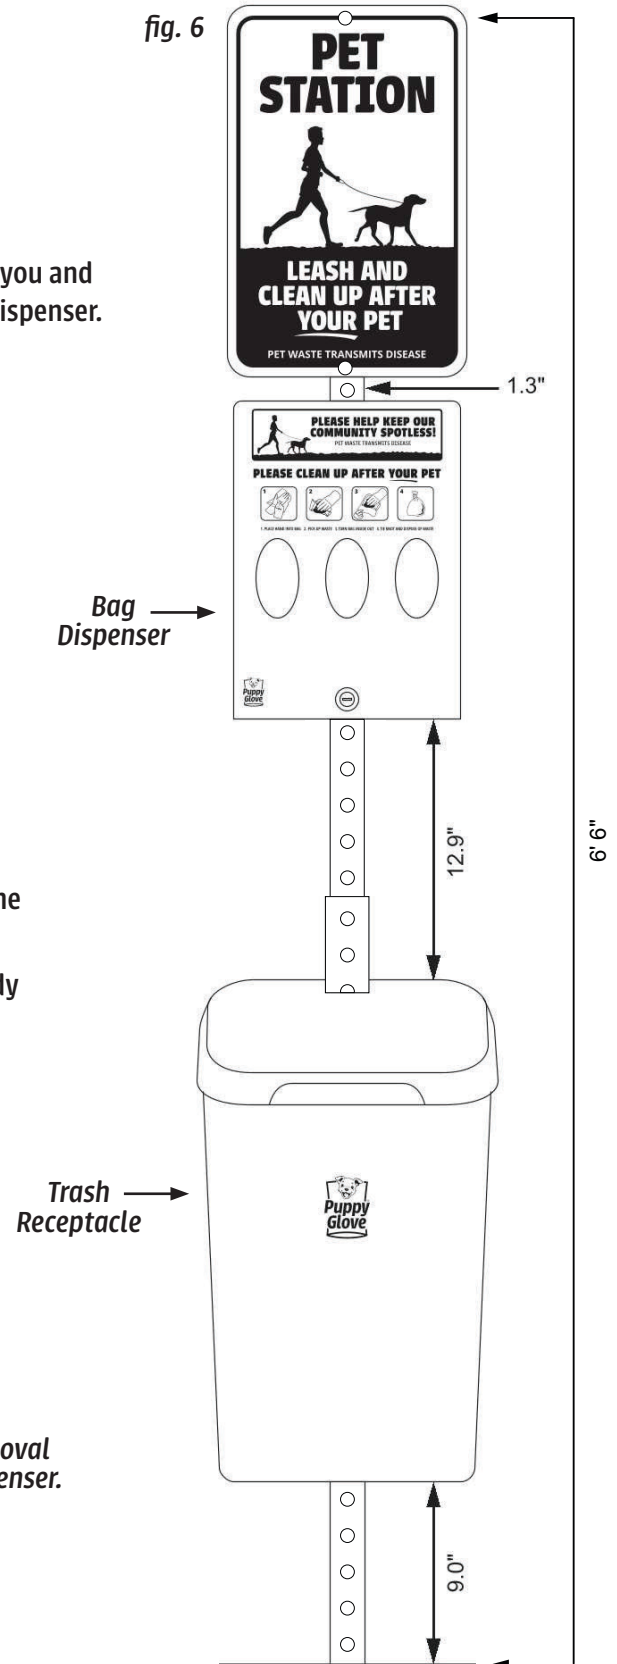

Puppy Glove™

Poly Pet Station - Steel Post

INSTALLATION INSTRUCTIONS

415242

ATTACH THE TRASH RECEPTACLE

ATTACH THE LID TO THE WASTE RECEPTACLE PRIOR TO MOUNTING

- Ensure the top of the trash receptacle is about 12.9" below the bag dispenser. This allows the lid to open fully without touching the dispenser.

NOTE: The trash receptacle lid will open to a pre-determined angle to prevent it from being over extended. The receptacle lid will hit the post when it is fully opened.

- The bottom of the can should be about 9" from the ground (fig. 6).
- Align the back wall of the receptacle to the pre-drilled holes in post. Use the 2" fender washers on the inside of the receptacle. Secure the trash receptacle using the 2½" bolts, washers and locknuts (Bag D).

INSTALL THE LINER TRASH BAG

- Place a Puppy Glove™ Trash Receptacle Liner Bag inside the trash receptacle. Fold it over the edge of the receptacle and close the trash receptacle lid.

MAINTENANCE

- Regular cleaning and maintenance will help expand the life of the trash receptacle.

ENJOY THE RESULTS!

Watch pet owners use the station to keep the area clean and tidy!


NEED MORE BAGS?

Contact Your Chadwell Supply Representative or Order Online.



ChadwellSupply.com | 888.341.2423

fig. 6

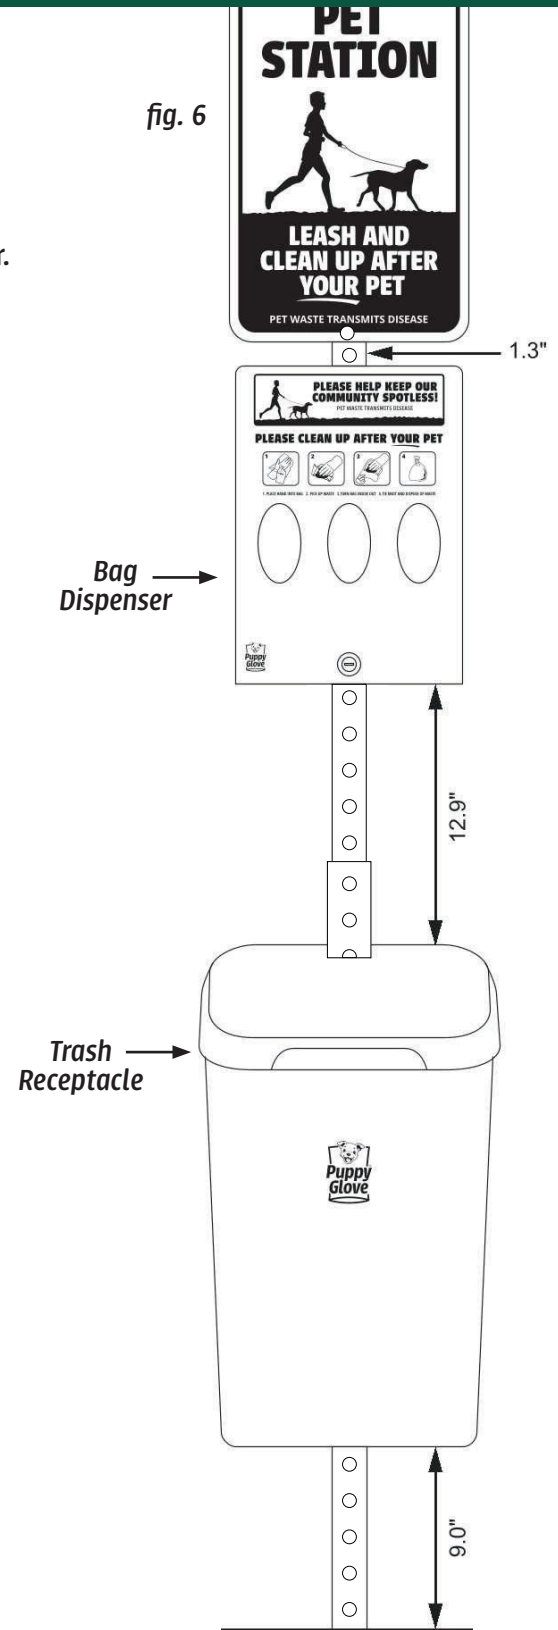

Everyone Appreciates A Clean Environment!